

- NOTES:
1. UTILIZE CORRECT ANCHOR PATTERN FOR SLOPE GRADIENT (See Anchor Pattern Details)

Please note that the information presented herein is general information only. It is for conceptual use only and not intended to be used for construction. While every effort has been made to ensure its accuracy, this information should not be used for a specific application without independent professional examination and verification of its suitability, applicability and accuracy.


TYPICAL SLOPE CROSS-SECTION

GENERAL CROSS-SECTION

Date: 7/14/03

Drawn By: JDD

Checked By: JDD

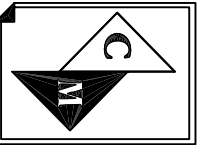

Carthage Mills

4243 Hunt Road • Cincinnati, OH 45242
 Office: 513-794-1600 • Fax: 513-794-3434
 www.carthagemills.com

SHEET

6